EnVizen Digital | MAXMADE

Portable DVD Player with ATSC TV
User Manual

Thank you for purchasing this product.
For your safety and best performance, please read this instruction before first use, and keep this manual for future reference.

In case that you have any further questions after reading this manual, please contact Customer Service at 1-866-709-1999 or email to service@envizendigital.com

atsc Advanced Television Systems Committee | DVD VIDEO | USB2 USB Host | AV out | Card-reader | Battery

Table of Contents

Table of Contents
Safety Precautions
1.1 Safety Precautions……1
Introduction to the Product
2.1 Features……3
2.2 Important Information……4
2.3 The Device and Accessories……5
Functional Overview
3.1 Device Overview……6
3.2 Remote Control……7
3.3 Power Supply Connection……8
3.4 Rechargeable Internal Battery……8
Digital TV
4.1 First Time Installation……9
4.2 Switch Channels……11
4.3 View Program（Guide）Information……11
4.3 Manage Channels（Favorite CH list）……11
4.4 Adjust Settings……12
4.5 View Closed Captions（Subtitles）……14
4.6 Closed Captioning……14
DVD/CD Player
5.1 DVD Playback……16
5.2 Information Display……17
5.3 Audio Function……18
5.4 Subtitles Function……18
5.5 Repeat Function……19
5.6 Guide Function……20
5.7 General Setup Menu……21
5.8 Audio Setup Menu……24
5.9 Video Setup Menu……24
5.10 Preference Setup Menu……26
USB/CARD Reader
6.1 USB/Card……30
AV Output
7.1 AV Output Connection……31
Troubleshooting……32
Technical Specifications……33
Warranty Service……34

1 ▶Safety Precautions

▶ 1.1 Safety Precautions

▶ Safety Guidelines

Congratulations on purchasing this product. We are sure that you will be entirely satisfied with this DVD player. Thank you for your confidence.
Please read this instruction carefully in order to use the appliance at its full performance.

This symbol indicates the presence of conductive electrical currents inside the appliance that could cause a risk of electric shock.

Processing with electric and electronic devices in end-of-life (applicable to the European Union and to other European countries which have a selective waste collection system).

This symbol affixed on the product or to its packing indicates that the product must not be processed with other domestic waste. It must be disposed in a proper collecting point for the recycling of electric and electronic devices. Making sure that this product is disposed of properly, you will make an important contribution to the prevention of the potentially negative consequences for the environment and human health. Recycling materials will help maintain natural resources. For any further information regarding the recycling of this product, you can contact your municipality, waste reception centre, or the store where the product was purchased.

	⇨ In case this product malfunctions, please do not attempt to repair it yourself. Opening the appliance may expose you to a risk of electric shock.
	⇨ Do not use this device near heat sources especially hot air ducts, cookers or any other appliance generating heat. Please note that this device cannot be exposed to temperatures lower than −5° or higher than 40 celsius either.
	⇨ Do not use this appliance near a wet area such as bathtub, sink, swimming pool or vase.
	⇨ Do not touch the power cord if your hands are wet. Do not use a damaged cord.
	⇨ Do not use products containing alcohol, gasoline, detergent or other flammable products clean the surface of the appliance.
	⇨ Do not drop the device or hit it. By doing so could seriously damage it.
	⇨ Do not let liquids or any foreign object in the appliance. Otherwise, it may cause a short-circuit, risk of electric shock or even fire.
	⇨ Do not cut, damage or place any heavy objects on the power cord. This may result in a risk of electric shock or fire.

1 Safety Precautions

1.1 Safety Precautions

Use and safety precautions for this appliance

Location: Place the device on a surface, far from magnetic fields. Do not put any heavy objects on the unit.

Ventilation: The unit must be located in a well-ventilated area. Leave a space of about 6 inches at the rear and on top of the appliance and a space of 4 inches on both sides. Do not place the device on a bed, a blanket or any other similar surface, which could block ventilation for the unit. Do not install the product in a bookcase, in a piece of furniture or a closed shelf, because that would impede ventilation. In order to avoid any internal overheating, do not cover the ventilation openings of the rear panel.

Condensation: Humidity might form on the reading lens when the unit is taken from a cold place to a warm place. If condensation has formed inside the device it might not work correctly In case this happens, do not use the device for a few hours.

Power source: Only use this unit with one of the power sources specified in the user's guide and on the identification label.

Power cord: To unplug the power cord, pull it by the plug. Never pull the cord itself. Never touch the main power plug if your hands are wet as this could cause an electric shock or a fire. Power cords must be correctly fixed in order to prevent them from being damaged. Avoid overloading wall outlets and extension cords beyond their capacity as this could cause fire or electric shock.

Power supply: When you do not use the device, unplug the power cord from the wall outlet. When the power cord is plugged in, a weak current flows inside the unit even if the unit is switched off. In case of storm, immediately unplug the Power cord from the wall outlet.

TFT LCD colour screen: Do not place a heat source near the screen. Do not touch the screen with a pointed object. Some lighted or dark sports may occur on the screen, but this is normal. Your unit is not defective or dead.

Battery: The battery must be fully charged for at least 2.5 hours before you use the device. Do not place the battery near a heat source. The unit works properly as long as the player is stored between −5° and +40°C.

CLASS 1 LASER PRODUCT
This unit employs a laser, Due to possible eye injury, only qualified service personnel should remove the cover or attempt to service this device. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

AVOID EXPOSURE- Visible laser radiation is emitted from this aperture.

2 ▶Introduction to the Product

▶ 2.1 Features

This unit uses a colour LCD TFT technology and has a Dolby Digital recoder to bring you quality Audio/Video and Home Theater products.

- ATSC digital TV, DVD player, Card-reader/USB all-in-one
- Built-in 2.5 hours continuous playing
- AV out - outputs your TV program or DVD movie to big screen TVs
- Supports disc formats: DVD/DivX/XviD/VCD/CD/CD-G/PictureCD/MP3/HDCD/SVCD/CD-R/RW /JPEG
- Car headrest mounting carrying case
- Supports 7 inch LCD TFT swivel widescreen display
- Supports 3 in 1 (SD/MMC/MS) Card-reader
- Supports USB 2.0
- Supports auto scan / channel scan
- Supports Program Guide
- Supports multi-language OSD
- Supports channel control/channel edit/program timer
- Supports resume play
- Built-in speaker & headphone output
- Supports linear 2-channel audio output
- Supports intelligent charging function
- Supports screen ratio : 4:3 & 16:9

Manufactured under license from Dolby Laboratories.Dolby and the double-D symbol are trademarks of Dolby Laboratories.

▷2 ▶Introduction to the Product

▶ 2. 2 Important Information

▶ Formats/Compatible Codes

LOGO	CODECS/FORMATS	COMPATIBILITY
MPEG4	MPEG4	✓
DVD VIDEO	VIDEO DVD	✓
DVD VIDEO DVD+R/RW	DVD+R DVD+R/RW	✓
DVD VIDEO DVD-R/RW	DVD-R DVD-R/RW	✓
COMPACT disc VCD-SVCD	VCD: video CD SVCD: super video CD	✓
Music	MP3	✓
Photo	JPEG photo type	✓
USB2 USB Host	USB2. 0	✓
Card-reader	SD/MMC/ MS	✓

▷2 ▶Introduction to the Product

▶ 2.3 The Device and Accessories

ED8850B

Remote Control

User Manual

Quick Start Guide

AC Adapter

Car Adapter

A/V Cables

Antenna Connector

Antenna

Carry Bag

3 ▶Functional Overview

▶ Front Panel

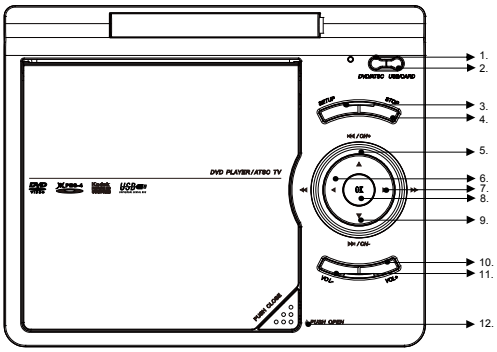

1. 1.Switch DVD / ATSC
2. 2.Switch USB / CARD
3. 3.Accesses / Exits the setup menu
4. 4.Stop disc play
5. 5.▲: Next Chapter / Channel Selection
6. 6.◀: Rewind / Left Navigation
7. 7.▶: Fast Forward / Right Navigation
8. 8.OK : Play (DVD) / Confirm your selection (ATSC)
9. 9.▼: Previous Chapter / Channel Selection
10. 10.Vol +
11. 11.Vol –
12. 12.Push Open

▶ Side Panel

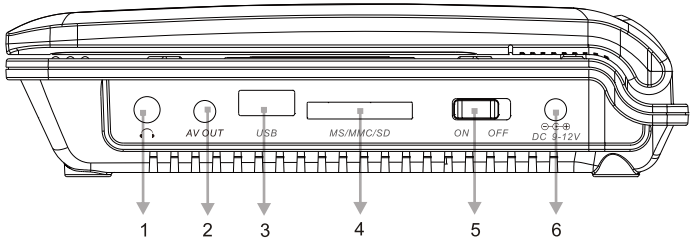

1. Headphone Port
2. AV Out
3. USB Port
4. Card Reader
5. Power
6. DC 9-12V

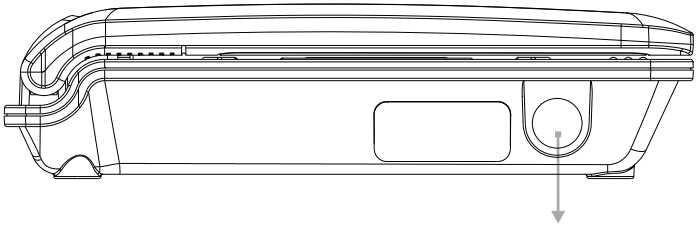

1. RF Antenna

3 ▶Functional Overview

▶ 3. 2 Remote Control

▶ Remote Control Functions

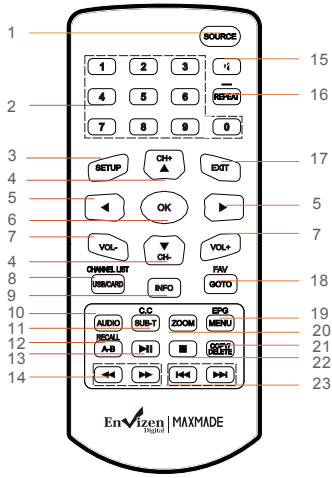

1. Switch DVD / DTV
2. Numeric Keypad 0-9
3. Setup : accesses or exits the setup menu
4. CH+/- : switch to the next / previous channel
5. ◀/▶ : Navigation
6. Play (DVD mode)
   Confirm your selection (ATSC mode)
7. Vol -/+ : decrease / increase volume
8. Switch USB / Card (DVD mode)
   Preview Channel List (ATSC mode)
9. Display program information (ATSC mode)
   Display playback information (DVD mode)
10. Switch languages that the disc supports
11. Switch OSD languages (DVD mode)
    Closed Caption (ATSC mode)
12. Repeat play (DVD mode)
    Recall channel playback (ATSC mode)
13. Play / Pause
14. ◀◀/▶▶: Fast Backward / Forward
15. Mute
16. Repeat Chapter (DVD mode)
17. Exit
18. GOTO: Search progress (DVD mode)
    FAV: Setup favorite programs (ATSC mode)
19. Menu playback (DVD mode)
    Program Guide (ATSC mode)
20. Zoom in or out the current picture (DVD mode)
21. Copy / Delete the files (DVD mode)
22. Stop disc play (DVD mode)
23. ⏮/⏭: Skip Backward / Forward

▶ Remote Control Use

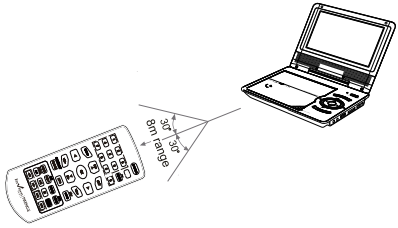

3 ▶Functional Overview

▶ 3. 3 Power Supply Connection

You have 3 options to supply power for the device.

▶ AC Adapter

Connect the supplied 9-12 volts AC adapter to the player and to the power outlet.
While this device is charging through the AC adapter, the internal battery will be charged at the same time. The charge indicator turns red while charging, the charge indicator turns off when the battery is fully charged. The Built-in rechargeable battery allows portable usage for up to 2.5 hours.

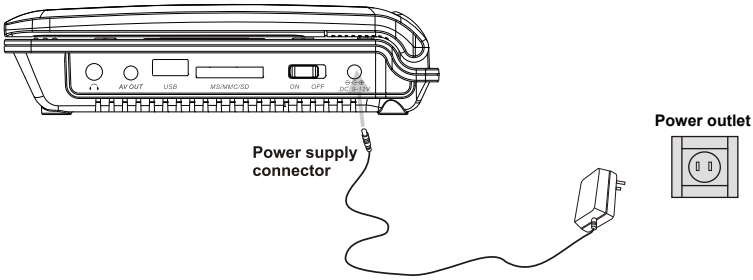

▶ Car Adapter

Connect the car adapter（supplied with your device ）as indicated below.
Caution! Do not use any other cords but the one supplied with your product.
The power supply voltage is 9-12 Volts, you must check if your vehicle voltage complies with this range Voltage before connecting. Be sure to unplug the adapter when you leave the vehicle.

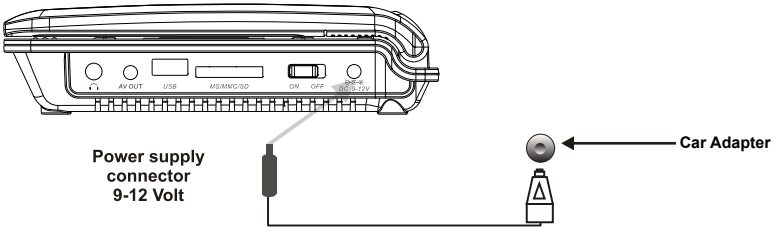

▶ 3. 4 Rechargeable Internal Battery

Operating instructions: The internal battery automatically charges when the device is connected to the AC adapter through a main power outlet. The internal rechargeable battery lasts up to 2.5 hours while fully charged.
Warning: To prevent fire or shock hazard, do not expose the device to water, rain, or moisture.
Never expose battery pack to temperature above 140 °F.
Do not disassemble.
Do not incinerate.

4 ▶Digital TV

Digital TV is a new broadcast system for TV stations intened to replace the analog NTSC television system in United States. The technical standard for Digital TV is defined by the Advanced Television Systems Committee (ATSC).
An advantage of digital TV broadcasting is that each broadcaster can now send multiple channels. For example, a broadcaster might air its main program on channel 8-1, while airing its weather segment on channel 8-2 at the same time.

For best use of our Envizen Digital Quartet Series, we wanted to provide you some helpful tips to maximize digital airwaves for the digital TV function to enhance your viewing experience with the quartet.

- Digital airwaves are not always consistent and vary depending on where you are. In some areas, digital signals are picked up more easily if you are closer to a TV broadcast station, giving you a clear TV picture. However, in other areas, digital signals may further away.
- Reception can also be affected by weather, terrain, trees, buildings. Any small adjustment to the direction or height of the antenna can make a large difference.
- It is helpful to position the magnetic external antenna by a window, a doorway, or an external wall to pick up the maximum amount of receptions in a room.
- It helps to stick the antenna to a metal object so it stays on magnetically. This turns that object into a larger antenna that will allow you to receive more digital airwaves.
- When you turn on your digital TV function, go to the Menu option and press “auto-scan”. This automatically searches for all available channels in your area. Do a periodic auto-scan to see if any new stations are available in your area.
- For more information or to check how strong the digital airwave reception is in your area at this website: www.dtv.gov or www.antennaweb.org

If you are still having difficulties, please contact us and one of our technicians will be glad to assist you (866)709-1999.

First time installation

When the unit is turned on for the first time, follow the on-screen Setup Wizard.

. Press ◄ / ► to select your language, then press ▼ to select [Go to next step:] and press **OK** to confirm.

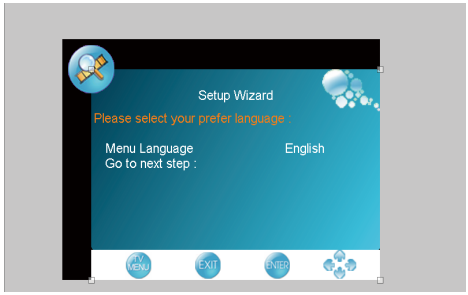

. You are prompted to select the time zone and daylight saving time.

. Select the time zone, DST and timer format, then press ▼ to select [Go to next step:] and press **OK** to confirm.

. Press ◀ / ▶ to select antenna type. Select the [Air], then press ▼ to select [Go to next step:] and press **OK** to confirm.

. Auto channel search [Air] starts and will take a few minutes.
. When auto channel search is complete, the total number of TV and radio channels found is displayed.

To view the programs of the first found channel, press **OK**.

Switch channels

. Press **CH+/CH-** or Number keys on the remote control.
. Press **RECALL** to return to the previously viewed channel.

View program information

. Press **INFO** to view brief information of the current program.

Note:
When you want to awake your portable TV from sleep mode, turn off Power Switch and turn it on again after a few seconds.

Manage channels

Press **MENU** under DTV mode, press ◀ / ▶ to select different tags below. Press **MENU** to confirm your setting and go back to previous menu level.

Adjust settings

1. Picture

[Picutre Mode] Press ◀ / ▶ to select the desired setting. ([Personal], [Standard], [Dynamic] and [Soft]).

[Contrast] Adjusts the intensity of bright areas, keeping dark areas unchanged.

[Brightness] Adjusts the intensity and details of dark areas.

[Sharpness] Adjusts the level of sharpness in image details.

[Tint] Adjusts the color balance in an image.

[Color] Adjusts color saturation.

[Color Mode] To set the color temperature to [Personal] [Normal], [Warm] or [Cool].

[Zoom Mode] Select different zoom mode. [Normal], [Wide], [Zoom], [Cinema].

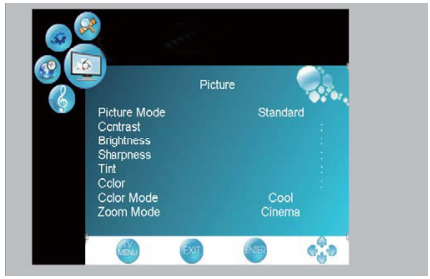

2. Audio

[Audio language] Select default audio language of multi-language TV program.

[Balance] Adjusts the sound balance.

3. Time

[Sleep Timer] Switches the TV to standby after a pre-defined period of time.
[Time zone] Select current time zone.
[DST] Set the Daylight Saving Time.
[On]: If it is summer time, select this option.
[Off]: If it is not summer time, select this option.
[Time format] Select the time format.
[Auto Sync] Sync the time with TV channels.

4. Setup

[Menu language] Select menu display language.
[Transparent] Select transparency of on-screen-display.
[OSD Time Out] Select the auto-off time of on-screen-display.
[Closed Caption] Select closed caption services.
[CC Mode]
[Basic Selection]
[Advanced Selection]
[Option]
[Restore default] Restore original settings.

5. Channel

[Air/Cable] Select the antenna type.
[Auto scan] Search TV channels automatically.
[Favorite] Add channels to your favorite list.
[Show/Hide] Show or hide specific channels.
[Channel No.]
[Channel label] Change channel name.
[DTV signal] Signal intensity and quality of current channel.

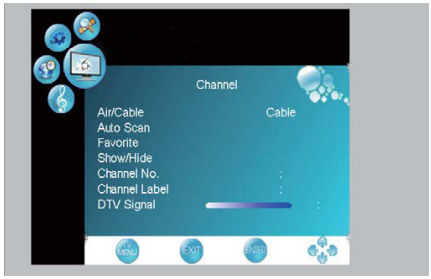

View Closed Captions (subtitles)

The caption service displays transmitted CC- and T- text. The caption text can be displayed permanently or only when the TV is muted.

Note

. This device provides a display of television closed captioning that conforms with the EIA-608 standard and in accordance with Sections 15.119 of the FCC rules.

. Not all TV programs and product commercials include closed caption information. Refer to your area TV program listings for the TV channels and times of closed caption shows. The captioned programs are usually noted in the TV listings with service marks such as 'CC'.

Closed captioning

Closed captioning is an assistive technology that allows persons with hearing disabilities to access television programming. Closed captioning displays the audio portion of programming as text superimposed over the video.

1. Display CC Mode

. Press **MENU**.
. Switch to Setup by pressing ▶ key.

Select [Setup] > [Closed Caption] > [CC mode], and press ▶ to turn on.

. Press **MENU** to exit.

2. Select Basic Selection or Advanced Selection

. Press **MENU** and select [Setup] > [Closed Caption] > [Basic selection], then Press ▶ or ◀ to select one of the listed caption services, and press **OK** to confirm.

. Press **MENU** to exit.

Note

. Not all caption services are used by a TV channel during the transmission of a closed caption program.

▷5 ▶DVD/CD Player

▶ 5. 1 DVD Playback

❶

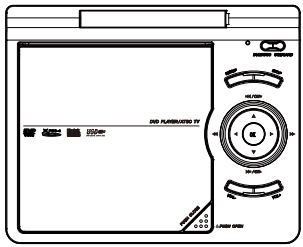

Open the cover of the DVD player

❷

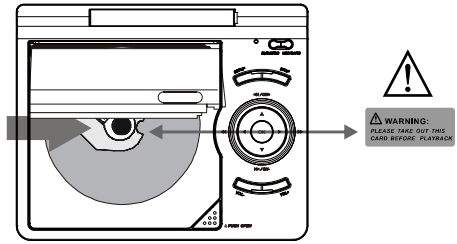

Remove the plastic cover

❸

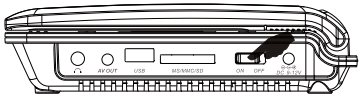

Turn on the power

❹

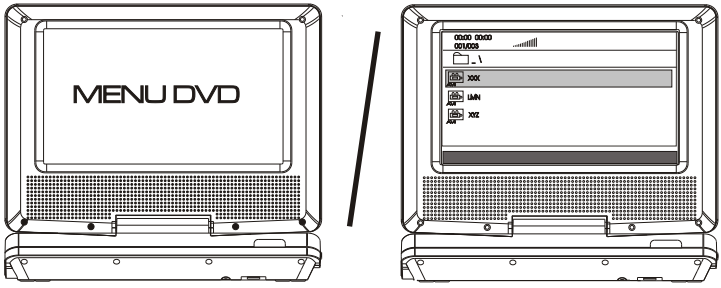

When you are playing a commercial DVD, the menu is displayed automatically.
When you are playing a DVD-R, CD, etc. a menu like the one above is displayed on the screen.
Select the file that you want to play with the ▲ or ▼ arrows on the remote control or with the◀◀ or ▶▶arrows on the player then press ENTER.

5 ▶DVD/CD Player

▶ 5. 2 Information Display

The display of the tracks contained on your CDs will be shown as follows:

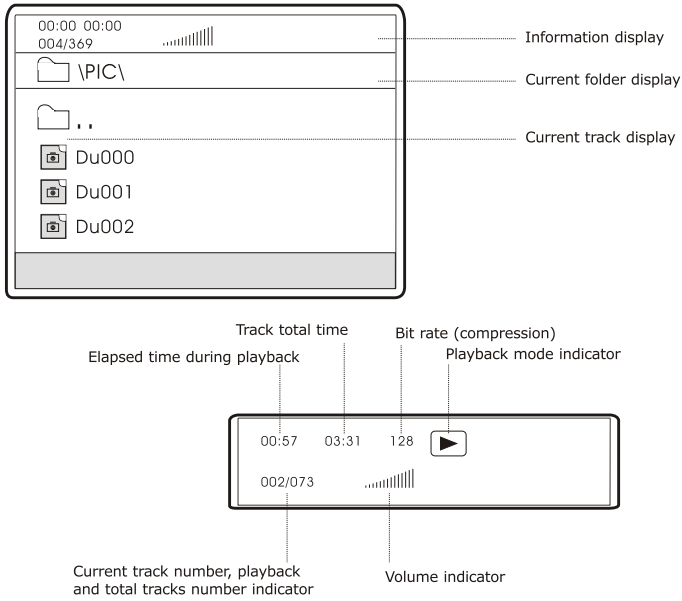

▷5 ▶DVD/CD Player

▶ 5. 3 Audio Function

Press the AUDIO key on your remote control to switch between available audio tracks on your DVD. This list of audio tracks is specified on DVD sleeve.
Note：Some DVDs do not support this function.

▶ 5. 4 Subtitles Function

Press the SUB-T key to switch the subtitle languages.
To remove subtitles, press the SUB-T key until you get the following information "Subtitle off".
Note：To display the subtitle of a film, the DVD must have the subtitle feature.

5 ▶DVD/CD Player

▶ 5. 5 Repeat Function

Press the REPEAT key to play the chapter, title or film again.
By pressing several times, you can select the type of repetition that you want.
To stop, press REPEAT one last time. Displayed are the following options.

DVD

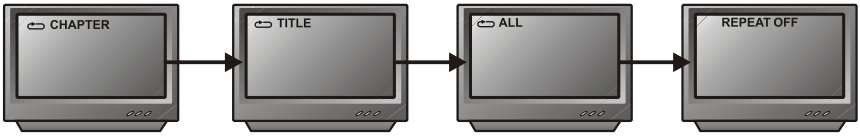

SVCD VCD AUDIO CD

Mp3 DIVX WMA

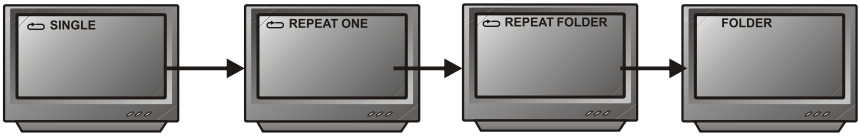

▷5 ▶DVD/CD Player

▶ 5.6 Guide Function

When you are playing a DVD, you can display the time and playback information by pressing the INFO key on the remote control.

1. Press the INFO key once to display the current title, chapter number and the elapsed time.
2. Press the INFO key twice to display the chapter elapsed time.
3. Press the INFO key three times to display the chapter remaining time.
4. Press the INFO key four times to display the title elapsed time.
5. Press the INFO key five times to exit that menu.

Note: On the mode of VCD/SVCD/AUDIO CD, the information display will be shown as follows:

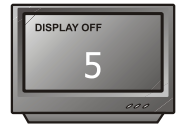

5 ▶ DVD/CD Player

The setup menu consists of four sub-menus, General Setup, Audio Setup, Video Setup, and Preference Setup.

This menu is accessible with the SETUP button on the remote control and on the device To navigate through the different sub-menus, use the ◀ and ▶ arrows; to navigate through the different options of the sub-menus, use the ▲ and ▼ arrows on the remote control.

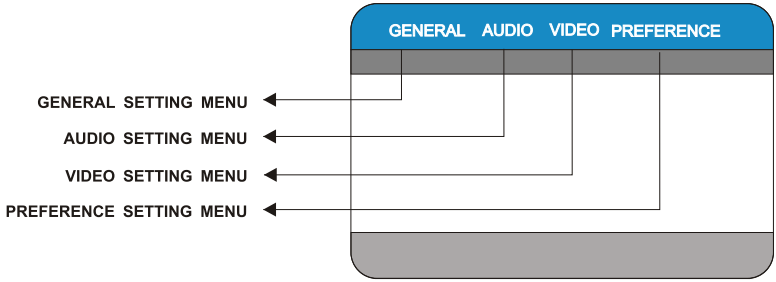

▶ 5. 7 General Setup Menu

The setup menu consists of four sub-menus, General Setup, Audio Setup, Video Setup, and Preference Setup.

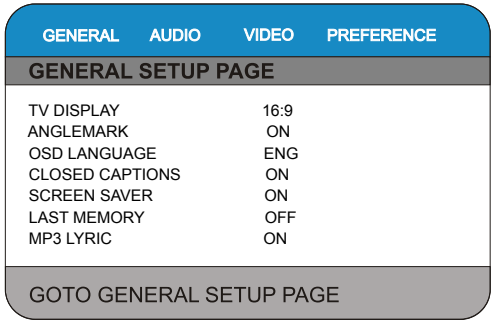

1. **TV DISPLAY**: This option allows you to switch among 4:3 letter Box and 16:9 Large.
2. **ANGLEMARK**: Change the angle of the disc.
3. **OSD LANGUAGE**: This option allows you to select the menu display language.
4. **CLOSED CAPTIONS**: Display the closed captions.
5. **SCREEN SAVER**: This option allows you to activate the screen saver to prevent damage to the TV screen.
6. **LAST MEMORY**: Last memory allows you to resume the playback of a film where you last stopped it.
7. **MP3 LYRIC**: Display the lyric.

▶ TV DISPLAY

This option allows you to switch among 4:3 Panscan 4:3 letterbox and 16:9 Large.

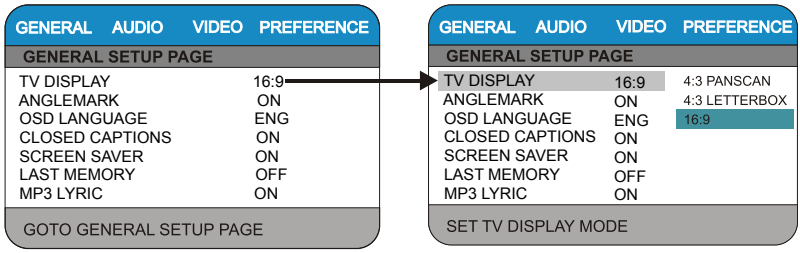

The following diagram allows you to see the differences among the proposed formats.

IMAGES	ECRAN TV		
	4:3		16:9
	Pan Scan	Letterbox	
4:3				
16:9				

▶ OSD LANGUAGE

This option allows you to select a menu display language.
You can select 3 languages: French, English, and Spanish.

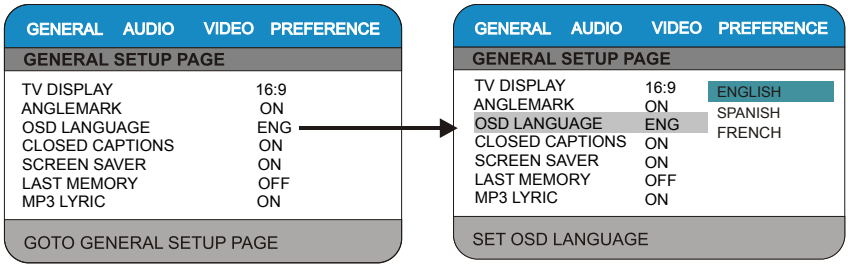

▶ SCREEN SAVER

This option allows you to activate the screen saver to prevent damage to the TV.

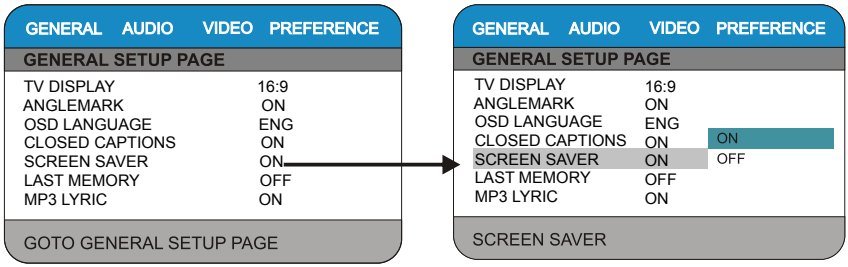

▶ LAST MEMORY

This option allows you to resume a film playback where it had been stopped.
To achieve that, you must first activate this function.
Note: This function can only be operated on Video DVDs.

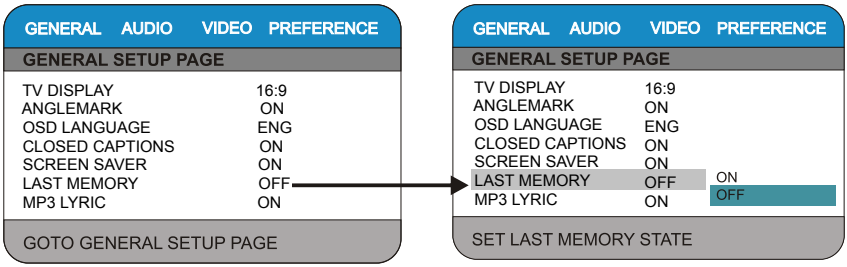

▶ 5. 8 Audio Setup Menu

▶ ANALOG AUDIO SETUP

This option allows you to set up the analog outputs.

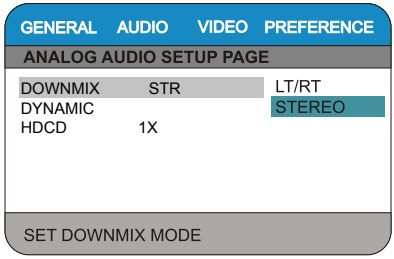

▶ 5. 9 Video Setup Menu

The sub-menu 'Video Setup' allows you to parameterize the video appearance of the player.

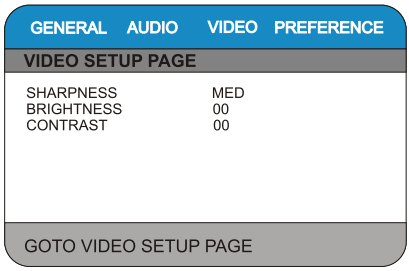

1. **SHARPNESS**: this option allows you to set the image sharpness and quality.
2. **BRIGHTNESS**: this option allows you to set the image brightness.
3. **CONTRAST**: this option allows you to set the image hue.

▶ SHARPNESS

This option allows you to set the image sharpness and quality. You can choose among high, middle and low.

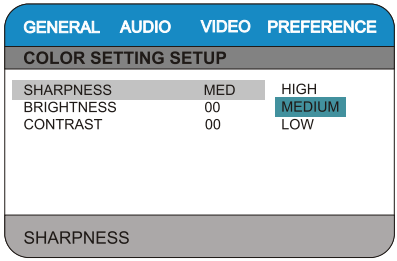

▶ BRIGHTNESS

This option allows you to set the image brightness.
You can set the brightness between −20 and +20. The more negative you set, the more the brightness decreases.
The setting can be performed with the ◂ and ▸ buttons on the remote control or on the player.

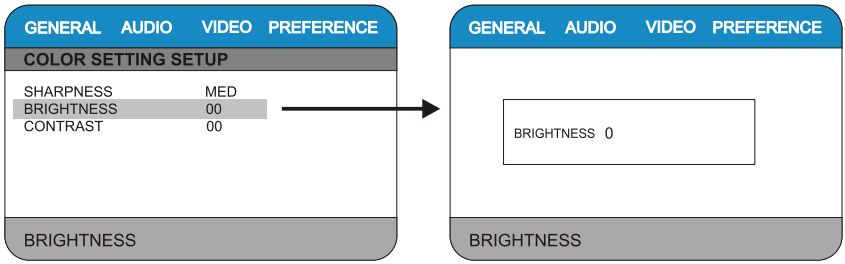

▶ CONTRAST

This option allows you to set the image contrast.
You can set the contrast between -16 and +16.
The setting can be performed with the ◂ and ▸ buttons on the remote control or on the appliance.

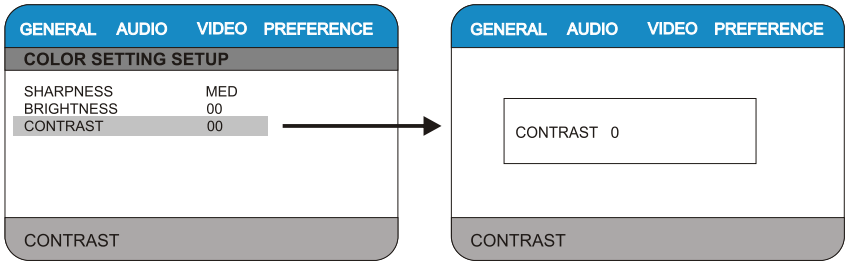

▶ 5.10 Preference Setup Menu

The 'Preference Setup' sub-menu allows you to customize the audio setup/video setup to your preferences.

Note: To enter this sub-menu, please be sure there is no disc inside the player.

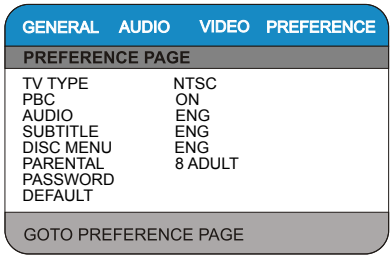

1. **TV TYPE**: This option allows you to switch from the PAL colour standard to NTSC.
2. **PBC** : Access / Exit the PBC playback.
3. **AUDIO**: This option allows you to select the default audio track when starting a video DVD. You can choose between English, French, and Spanish.
4. **SUBTITLE**: This option allows you to select the default subtitles language. You can choose between English, French, and Spanish.
5. **DISC MENU**: This option allows you to select the default language of the DVD menu. This option can only be operated if the DVD has a menu.
6. **PARENTAL**: This option allows you to parameteize the parental language of the DVD menu.
7. **PASSWORD**: This option allows you to change the password of the parental lock.
8. **DEFAULT**: This option allows you to reboot the default settings of the appliance.

▶ TV TYPE

This option allows you to switch from the PAL colour standard to NTSC. The DVD players use a PAL or NTSC signal in video output. If you notice a image in black and white on your TV screen your TV is still in SECAM mode when the DVD transmits a PAL signal. you must switch your TV in PAL mode.

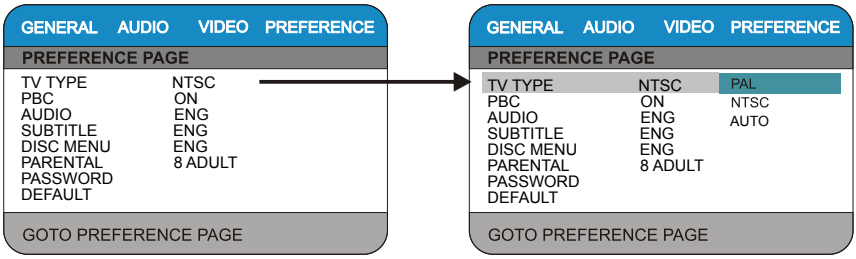

▶ AUDIO

This option allows you to select the default audio track when starting a Video DVD.
You can choose between English, French, and Spanish.

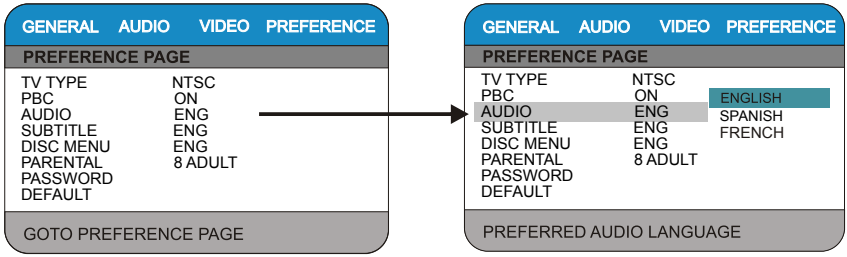

▶ SUBTITLES

This option allows you to select the subtitle languages. You can choose between English, French, and Spanish.

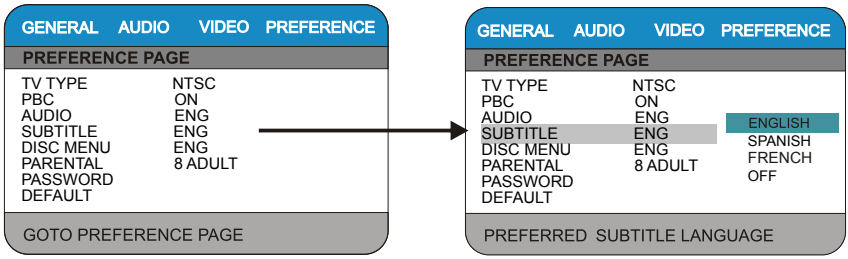

▶ DISC MENU

This option allows you to select the default language of the Video DVD menu.
Note: This option can only be operated if there is a menu on the DVD.

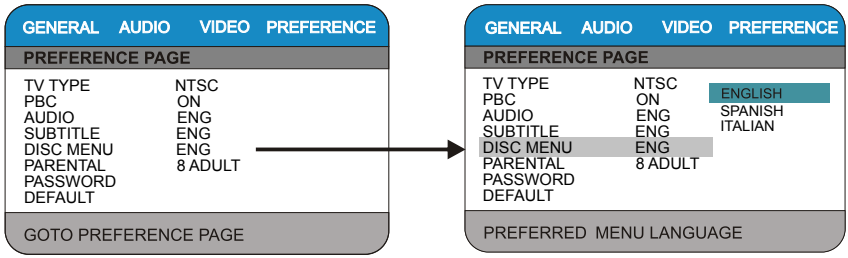

▶ PARENTAL LOCK

This option allows you to parameterize the parental lock among different choices:

1. Children
2. All public
3. Parental control
4. Forbidden to -13y.o
5. Parent necessary
6. Adults
7. Available for +17y.o
8. Advised public

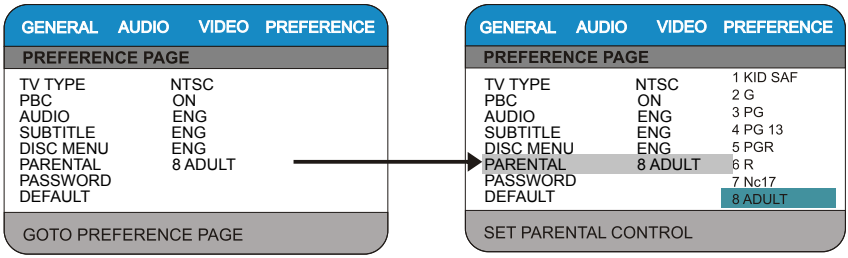

▶ DEFAULT

This option allows you to reset to the default settings of the device.

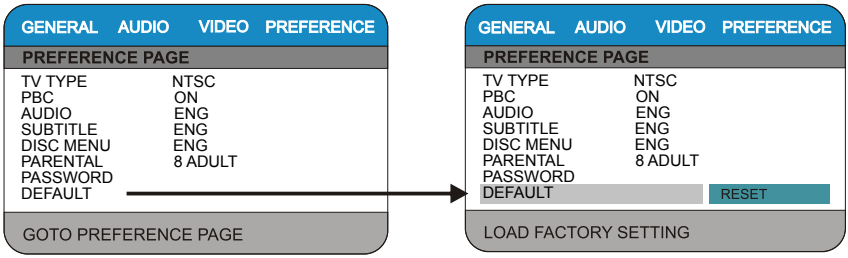

▶ PASSWORD

This option allows you to change the password of the parental lock.

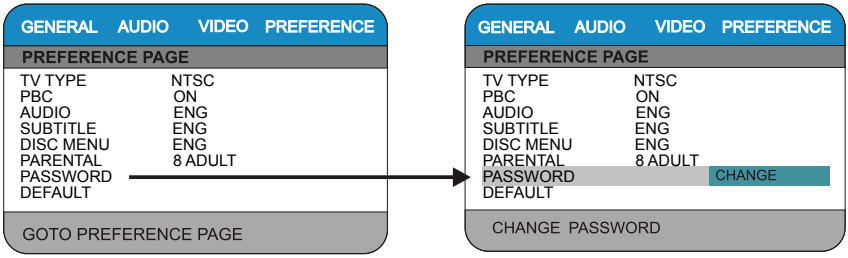

The default password is:8806.
To change the password, type your new password in the corresponding fields and confirm.

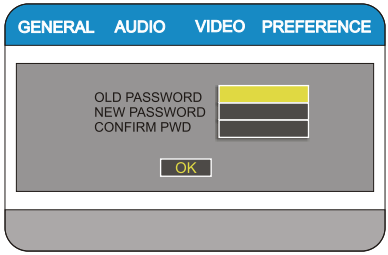

6 ▶ USB/CARD Reader

▶ 6.1 USB/CARD

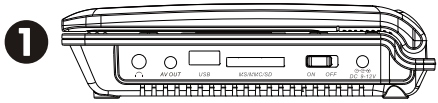

Switch " on "

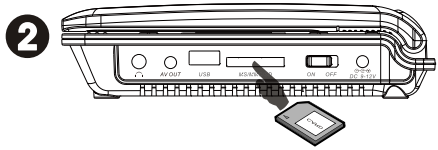

Insert the SD/MMC/MS card in the slot located at the side of the player

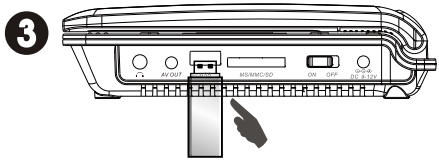

Insert the USB in the slot located on the back of the player

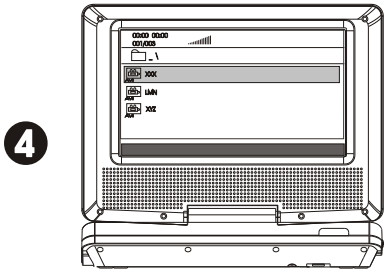

Switch device to DVD/DTV mode. Then, insert USB or SD/MMC/MS card, and press the USB button on your remote control or on the device. A menu will be displayed on the screen as above picture.
Select the file that you want to play with the ▲ or ▼ arrows on your remote control or with the ◀◀ or ▶▶ arrows on the player then press ENTER.

Note: You must use Card/USB under DVD mode, and please be sure there is no disc in running. Then, Insert USB/Card first, press USB/Card to switch the right mode that you want to playback your media files.

7 AV Output

7.1 AV Output Connection

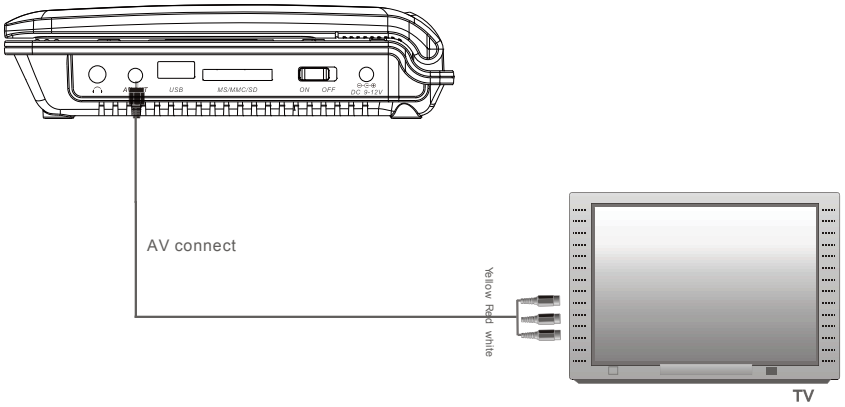

Notice: Please turn off all devices before connection.

As shown in the picture, use the A/V cable to connect the unit with other devices. Switch the unit to AV mode.

8 ▶Troubleshooting

▶ 8. 1 Reason and Solution

If you come across any difficulty with your appliance, please observe the troubleshooting guide below:

Problems	Solutions
The remote control does not work.	-Check the remote control battery. Change them if necessary -Use the remote control at a distance less than 6 meters. -Remove the battery and hold one or several keys for a few minutes to reboot the remote control processor. Replace the battery and try again.
The Unit does not work.	-Is the power cord connected to the device? -Make sure that the power switch is not enabled on OFF Position.
The disc playback does not operate.	-Check the disc installation: label side up -Is the disc compatible with the format supported? -Is the other disc dirty or scratched?
The ⊘ icon is displayed on the screen.	-This icon is displayed when you want to enable some functions which are not compatible with the format of the disc being played.
The screen aspect ratio cannot be changed.	-The display aspect ratio is set according to its recording on the DVD.
No sound.	-Make sure that the Digital Output selection is correctly enabled in the AUDIO menu.
No signal found.	-Antenna is disconnected / damaged / out of digital signal area. Please check antenna, or move it to another area which can get a better signal.
Scrambled channel message.	-Channel is scrambled.
After moving the unit to another room you find you are no longer able to receive reception.	-It is helpful to position the magnetic external antenna by a window, a doorway, or an external wall to pick up the maximum amount of reception in a room.

9 ▶ Technical Specifications

DVD	
Compatibility	DVD/VCD/CD/MP3/MPEG4/DIVX
Screen Size	7 inches (23cm)
Frequency Range	From 20Hz to 20KHZ
Sound Pressure	+ 85dB
Power Source	DC 9-12V
Consumption	9W
Operation Condition	5~40
Built-in Battery Type	Li Polymer
Dimension	7.8 x 6.3 x1.6 inches(w/d/h)
Weight	1.8 lbs
ATSC	
Receiver Standard	ATSC Air
ATSC Band	Air: VHF 2∽13CH ;UHF 14∽69CH
Transport Stream	MPEG-2 ISO/IEC13818
Profile Level	MPEG-2 MP@HL
MPEG Decoding	MPEG-I &MPEG-II
Decode All A-53/A-54 Broadcast Formats	All Standard Formats

Warranty Terms and Conditions

Envizen Digital ("Envizen") warrants your Envizen products against defects in material and workman ship during the warranty period from the original date of purchase, subject to the following terms and conditions. If a product proves to be defective in material or workmanship during the warranty period, Envizen will, at its discretion, repair or replace the product with the same model provided the purchaser adheres to certain return authorization procedures and guidelines.

Warranty Period

All Envizen televisions/media players/DVD players/speaker systems/digital photo frames are warranted for one (1) year for parts and ninety (90) days for labor, starting from the original date of purchase/invoice. After warranty period, the customer is responsible for parts and labor charges.
Rechargeable batteries are warranted for ninety (90) days for parts and labor.
Non-rechargeable batteries are not covered by warranty.
A new warranty does not start with the replacement of a new product.

This Warranty Does Not Apply to:

1.Any product, on which the serial number has been defaced, modified or removed.
2.Damage, deterioration or malfunction resulting from:
a)Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
b)Repair or attempted repair by anyone not authorized by Envizen.
c)Any damage of the product due to shipment.
d)Removal from or installation to the product.
e)Causes external to the product, such as electric power fluctuations or failure.
f)Use of supplies or parts not meeting Envizen's specifications.
g)Normal wear and tear
h)Any other cause which does not relate to a product defect.
3.Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, gouges or any other defacement
4.Physically damaged products by purchaser, such as broken PCB, Housing, damaged LCD Module
5.No Defect Found (product returned to Envizen as defective but failure is not duplicated by Envizen's test method).
6.Product without proof of purchase. (The proof of purchase should be one of the following documentations:
purchase receipt, gift receipt, sales invoice, and packing list that contains the product model number, price, vendor, and purchase date.)
7.Any damage caused by battery leakage.

How to Get Warranty Service

1.To obtain the warranty service, you will be required to reach Envizen's Customer Service by phone at 1-866-709-1999 or by email at service@envizendigital.com for assistance. You will be asked to provide the following information:
a)Customer information (name, day-time phone number, e-mail address and/or residential address)
b)Proof of purchase (purchase receipt, gift receipt, sales invoice, order No#, and/or packing list)
c)Product model number
d)Product serial number
e)A description of the problem
f)Payment information (If any payment is required, you will be asked to provide this information beforehand.At this moment, we only accept personal check, money order, credit card or cashier's check.Sorry for the inconvenience.)
2. We will issue you an RMA number for your returned item. Please take or ship product with the RMA number to Envizen service center. All products should be returned in secured packaging, preferably in the original package, with the complete set of accessories.
3. Upon receiving the product, depending on the condition of the defects, Envizen will repair or replace product, and ship it back to the customer within 2~4 weeks.
4. For additional information, please contact Envizen Customer Service.

Out of Warranty Repair

For additional information on obtaining an extended warranty service, contact Envizen Customer Service Department by e-mailing service@envizendigital.com or call 1-866-709-1999.
Products out of warranty requiring replacement will be reviewed individually, but all will require the shipping and handling fee.

During the period of product warranty, we will answer your basic configuration, setup and troubleshooting questions; and when necessary, we will provide you with all the instructions on how to return your product for repair. For more customer service and support inquiries, please call 1-866-709-1999 or e-mail us at service@envizendigital.com.